



VILLAGE OF
PINCKNEY

220 S. Howell
Pinckney, Michigan 48169
734.878.6206
734.878.9749 Fax
www.villageofpinckney.org

Enclosed is the water meter you ordered.

Also, in this packet, you will find instructions on how the meter should be plumbed if this is a secondary meter. Please share this diagram with your installer as it is very important that it be done correctly the first time.


Finally, below are the instructions on installing the wire for the meter.

Installing wire for your irrigation meter

Due to liability, the Village of Pinckney (VOP) now provides wire for you to install your water meter. The wire connects to the meter terminals and should run discreetly thru the building to the Radio read box, which is a cream-colored box labeled 'Sensus' located outside of the building. Leave at least 2 feet of extra wire on each end to allow the DPW to connect the wires to the terminals and program the meters during the final inspection. When possible run the irrigation meter wire alongside the Main meter wire, especially where it goes out of the building to connect to the Sensus box.

If relocation of the Sensus box is necessary or if you have any question please contact the Water Department at dpw@villageofpinckney.org or call 734.878-0666. Additionally, please notify the Water Department when the work is complete so it can be inspected and final connections completed.

Thanks
Scott Mills
Village of Pinckney
Director of Public Works
Phone: 734-878-0666

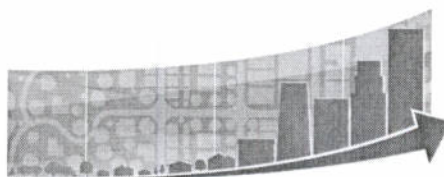

redevelopment ready
communities®